




Assembly Instructions for aseke Mooring Bolts




Bolts included in this assembly instruction:

T-BOLT WITH KNURLED THREADS FOR EXCELLENT GROUTING						MINIMUM STRAIGHT		
ITEM NO	DIA	TYPE	LENGTH BOLT		TEST LOAD	STRETCH LOAD	KG PER PIECE	PACK UNIT
			UNDER T-/EYE	VERTICAL BOLT MEASUREMENTS				
911232	32 MM	T-BOLT	350 MM	35 X 240 MM	22.000 KG	45T	4,7	6
911238	38 MM	T-BOLT	500 MM	42 X 300 MM	28.000 KG	60T	8,7	6
911245	45 MM	T-BOLT	600 MM	50 X 400 MM	39.000 KG	80T	13,7	4
911257	57 MM	T-BOLT	600 MM	65 X 460 MM	58.000 KG	120T	27,5	2

EYE BOLT WITH KNURLED BOLT CONSTRUCTION FOR EXCELLENT GROUTING						MINIMUM STRAIGHT		
ITEM NO	DIA	TYPE	LENGTH BOLT	ID EYE	TEST LOAD	STRETCH LOAD	KG PER PIECE	PACK UNIT
				MEASUREMENTS				
911235	32 MM	EYE BOLT	350 MM	37 MM	22.000 KG	45T	4,4	8
911239	38 MM	EYE BOLT	500 MM	44 MM	28.000 KG	60T	7,9	6
911246	45 MM	EYE BOLT	600 MM	52 MM	39.000 KG	80T	9,4	4
911258	57 MM	EYE BOLT	600 MM	70 MM	58.000 KG	120T	22	2

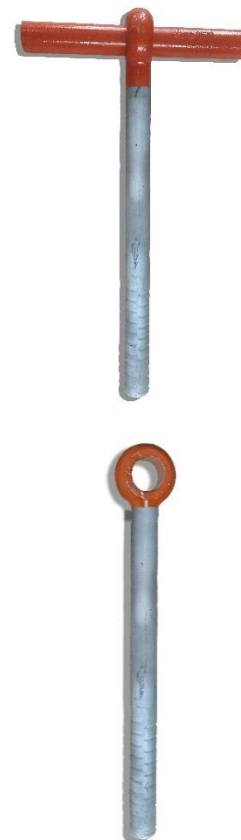


Mounted with a two-component creep compound type Lock-Set or equivalent.
 Use enough compound so that it floats out of the drill hole.
 Dimension of the drill hole must be 4mm larger than the diameter of the shaft of the mountain bolt.

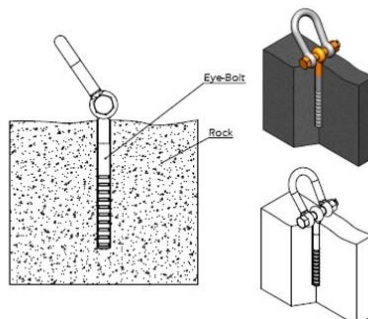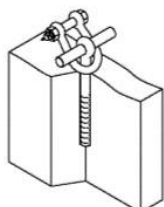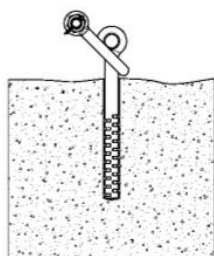

The T-bolts are mounted so that only the painted part of the bolt is visible above the surface.

The eye bolt must be installed so that the eye touches the surface.

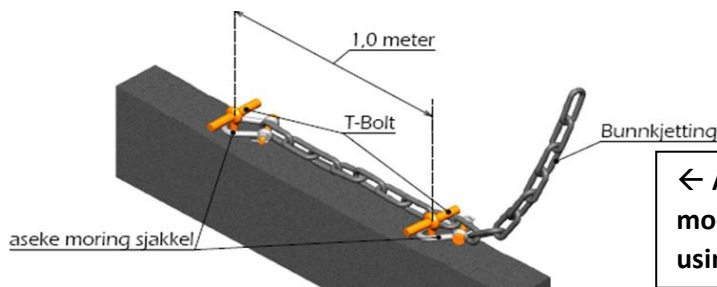

← An extra layer of safety for mooring can be achieved by using two mooring bolts.

If you have any questions about these installation instructions or the product, please contact us at **aseke** on TLF: +47 22 13 02 00 E-mail: post@aseke.no